


- 02- Install 40/3 DCS 2100
- 04 "
- 06 "
- 08 "
- 10 "

- 01- remove DDE 1Ø Pole & DG
- 03- remove 1Ø Tangent pole
- 05 "
- 07 "
- 09 "



MORRISON

100th Ave

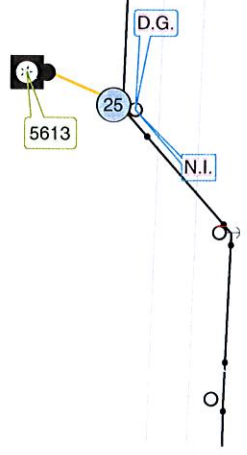

11 - Replace 35/5 1Ø tangent
with 40/3 DCS-2100

12 - "

13 - "

14 - "

15 - Install New DCS-2100
40/3

16 - Remove 35/5 1Ø Tangent

